




**90" WING SPAN
P-51D MUSTANG**

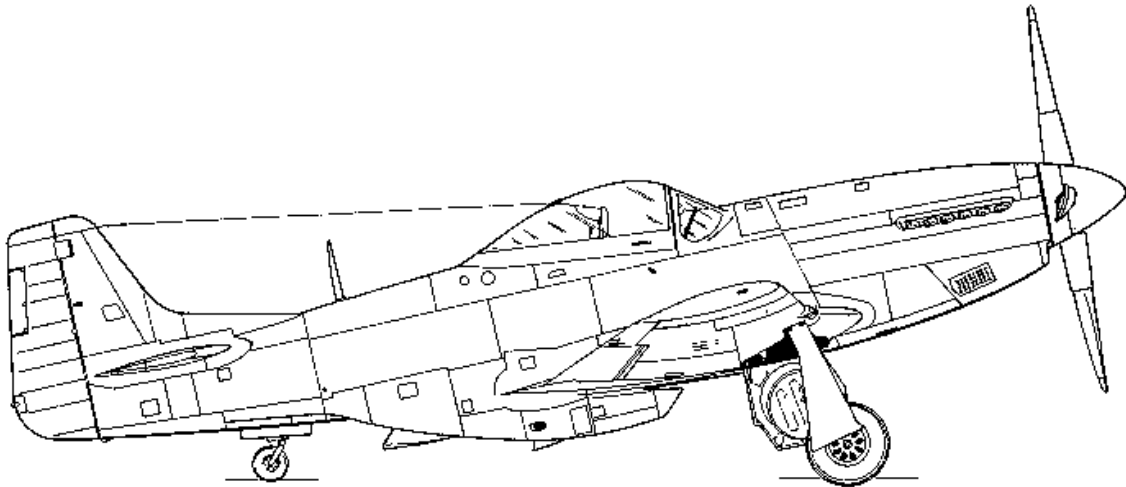

THIS IS A VERY EASY PLANE TO BUILD

GENERAL INSTRUCTIONS

This design is basically an enlargement of the very popular fun scale "Mustang" 60 Size. You can build it light by using balsa instead of the called for 1/8" mahogany "Door Skin" which is 36" x 88" per sheet (only one required). We found that the easiest method of cutting the parts from the D.S. (Door Skin) was to use a "Stanley" utility knife. The mahogany cuts very easily compared to a jig saw, especially the large fuselage sides.

An 11 lb. Model can be built using balsa instead of mahogany, a small engine and only 4-channel operation. The prototype has all the goodies, a S.T. 2500 with the described muffler system and weighs over 14 lbs. It flies very docile at this weight, so do as you want.

FUSELAGE

1. Cut the fuselage pattern "A" and "B" from the plans and tape together using a straight edge along the top line to insure alignment of the two patterns. (When you pick up your door skin from your lumbar yard, have it cut to 65" long and then to 12" widths. Easier to get home and cut out the parts.)
2. Cut out your sides with the utility knife. Use a razor saw for the notches.
3. You can cut the radius in the lightening holes with many 1/8" holes if you don't have a 1" diameter bit.
4. Face the sides to each other per illustration and install all 1/4" x 3/8" balsa stiffeners to the top and bottom of the sides. See side view for added details.
5. Install the 1/2" x 1-1/16" x 6-5/16" part to the sides as shown being sure it is 1/8" from the end and flush to the top edge (this piece supports and sets the angle of the motor mount).
6. Install the 1/2" x 4" x 20-7/8" wing saddle doubler to the sides. Note the 1/8" gap at the rear.
7. Join the 1/8" balsa nose sheet using 1/32" ply strip to reinforce the joint.
8. Tack glue all bulkheads in place.
9. Make two 90° squares to hold F-3 and F-4 square to the sides.
10. Install the other side gluing only at F-3 and F-4. (Use a large square to check all around the sides for equal alignment to each other.)

11. If you do not have a fuselage “jig” try this. Draw a 48” line on your bench. Set F-3 – F-4 over this line (centered). Block the fuselage at F-3 and F-4 so it won’t move. Pin the ends together. Use the 90° square to align the ends over the line, being sure that the ends are also straight up and down. Glue.
12. Join the front end at F-2 the same.
13. Install F-1 to the 1/4” ply motor part at 90°. Use a support to insure the angle.
14. Install this assembly to the bottom of the 1/2” x 1-1/16” x 6-5/16” piece. (Be sure the extra piece of 1/4” x 3/4” x ply is installed under the motor mount. See side view.)
15. Install a 1/2” x 1/2” x 6-5/16” piece of balsa under the motor mount against the sides. (Not shown.)
16. Install fuel tank floor and cockpit floor. (The balance of assembly is pretty obvious. Only helpful hints will be listed hereafter.)
 - A. The nose cowl should be assembled in place except for the 3/32” planking which is installed in two stages. Between F-2A and F-3A and then between F-1A and F-2A. Wet the balsa when bending around the bulkheads. (Pick super soft balsa for this step.) Cowl is held in place with screws thru hard wood blocks located at F-1 and F-3.
 - B. The fuselage ends including the tail post should be 1/2” wide, which equals the thickness of the rudder.
 - C. After you have glued the 1/8” balsa front end of the sides to F-1, notice that the balsa edge is not straight. Sand this straight. Add a piece of 1/4” balsa to the inside of this balsa side area to provide additional gluing area for the nose blocks.

TAIL FEATHERS

1. Decide now what size engine you intend to use. If it is larger than 1.8 cu. in. you best plan on reinforcing. Consider sheeting the surfaces and bracing them or adding triangles under and over the horizontal stabilizer to provide more gluing surface.
2. This part is elementary so we leave you to this simple task. Use large DuBro cotter pin type hinges. Secure with toothpicks. (Be sure and use stiff hard balsa for the stab spars. See plans.)

WING

1. The wing plans show a separation feature for ease of transport. You must decide now if you want to incorporate it. Note: Ribs W-1 thru W-4 should be cut from straight hard balsa or door skin. The spars should be medium to hard balsa.
2. Fabricate the “spar brace” from pine or 1/2” plywood. The width should be reduced a very small amount to prevent binding when removing. Your local lumberyard can help you make this part if need be. Put rib angles marks on the brace.
3. Make up your leading and trailing edge sheet now. Mark them top, bottom, left right. The aileron portion of the trailing edge sheet should be cut now. Tape it back into the sheet so it remains intact for early assembly. (After wing is finished, removal of the tape lets the aileron fall free.) Install the wing dowel and W-1A to W-1.
4. Pin the sheets and cap strips to the “right” wing plan. Note: There are extension lines for all hidden lines under the sheets. Install the bottom spar.
5. Tape the mid-spar to the top of the spar brace per spar brace detail. Place on top of the bottom spar and secure with weights.
6. Pin ribs W-1 to 5 in place. Align W-1 to the marks on the spar brace. Glue a 1/4” x 1/2” piece of scrap to the mid-spar and W-1. Set the rest of the ribs 90° to the workbench and secure as shown with 1/4” x 1/2” scrap. Note: If you want a one-piece wing, glue the spar brace in place.
7. At this point decide if you want to follow the suggested aileron hookup and sliding servo or a system of your choice.
8. Be sure all shear webbing runs vertical.
9. Because the wing is flat on the bottom it is easy to check for warps. Lay two straight pieces of balsa on the flat area at the root and tip. Eyeball from the end of the wing. Do this before installing the top sheeting.
10. If you are installing retracts, give thought to the final weight when choosing which retract to buy. We recommend Robart #630 Retracts. There are many choices of wheels. Tally Ho! The Robart military 4” wheels were our choice for the prototype. To avoid flat spots from sitting on hot asphalt you can install in the tire round foam strips found in the building industry. They are used as weather stripping between precast walls.

11. After the wing is finished and bolted to the fuselage, consider making a 1/32" x 1" x 4-1/2" plywood strap to fit under the wing bolts to keep the rear of the wings together. You will have to put a notch in W-1 T.E. area for the "wing guide."
12. The scoop removes separate from the wing. We leave to you the method of attachment.

GENERAL ADVICE

1. Bolt the engine to the 3/8" x 3/4" x 3" maple blocks using aircraft locking nuts. These blocks are secured to the motor mount with #8 x 1-1/4" sheet metal screws. They never come loose!
2. The prototype with retracts flappers-ons and a 54 oz. power plant balanced right on the C.G. without the receiver, battery pack or 4 servos in the fuselage. If you choose a 25 oz. power plant such as a O.S. 120 4-cycle you face either adding lead to the nose (even if you move all radio gear forward) or using balsa instead of O.S. and passing up the retract tail wheel. All in all the ST 2-3000 engines are hard to beat from a H.P. vs. cost aspect. Should you opt for the suggested exhaust system, avoidance of a large exposed muffler is achieved.
3. Adaptor nuts for the spinner are made by Tru-Turn. Many hobby shops also stock them.
4. Gasoline engines, such as a Zenoah G38, can be used by installing a 1/4" ply firewall. Try to avoid those weighing in excess of 4 lbs.
5. Remember the C.G. location at the mainspar. Please balance before flying.
6. If you run into a problem or find an error on the plans, please e-mail sales@meister-scale.com or call (973) 584-4905.

FLYING

1. If you previously built and flew the .40 or .60 size fun scale Mustang, you need no advice.
2. Set elevator control throws to 1/2" up and 1/2" down. Rudder 1" each way. Ailerons 1/2" up and 1/2" down. After initial flights set to your taste.
3. Take offs are easy IF you add power slowly and use a little rudder. There is no need for full throttle take offs.
4. Flying is easy with no bad habits.
5. The "Mustang" will land very slow so don't try to land too early.
6. If you fly off grass, please move the gear axles forward or you might have a nose over conditions.



WWW.MEISTER-SCALE.COM

973-584-7084

90" P-51 MUSTANG PARTS LIST

Fuselage Balsa

Wing Balsa

- 3- 1/8" x 3" x 36" soft top and bottom planking and cockpit deck
- 4- 1/4" x 3/8" x 36" fuselage side between bulkheads
- 4- 1/4" x 1/4" x 36" stringers and bulkhead reinforcement
- 1- 1/4" x 3" x 36" lower nose blks.
- 2- 1/2" x 4" x 36" wing saddle doubler
- 2- 1" x 3" x 6" soft balsa for top fuselage blocks between F-5 and F-6

- 8- 3/32 x 3 x 36 center section Shearwebb & L.E.
- 4- 3/32 x 3 x 48 trailing edge sheet
- 4- 3/32 x 4 x 48 leading edge sheet
- 9- 3/32 x 1/2 x 36 cap strip
- 11- 1/8 x 3 x 36 ribs and scoop
- 8- 1/4 x 1/2 x 36 T.E. and aileron
- 5- 1/4 x 1/2 x 48 top-mid-bottom spar
- 2- 3/8 x 3/8 x 48 leading edge

Wing Saddle Doubler Residue provides basis of wing tip.

Full thickness tip requires additional balsa.

Hardwood

Ply

- 2- 3/8" x 3/4" x 3" engine pads

- 1 - .1/16" x 4" x 7" landing gear doors
- 1/8" ply parts from door skin residue

Fuselage Plywood

Tail Feathers

- 1- 1/4" x 6" x 12" air craft ply for engine mount
- 1- 1/8" x 36" x 88" door skin cut to 3 pcs. 12" wide by 65" long. 2 pcs. required for fuselage sides. Excessive residue used for bulkheads and other noted parts.

- 4 - 1/2" x 1/2" x 36" all other
- 1 - 1/2" x 3" x 36" center section and tips
- 2- 1/4" x 1/2" x 36" ribs - elev. and rudder T.E.

UPDATES!!!

The removable spar brace feature should NOT be used when engines exceed 1.2 CU. IN 2 cycle or model weight exceeds 14 lb. In this event, simply glue the rear brace in place.

UPDATES!!!

Consider binding the upper and lower spars next to W-1 to improve strength when using split wing feature. When using the suggested muffler system be sure to install a silicone rubber sleeve between the engine and muffler in order to isolate vibration. Add support blocks to the retract mounting plates where they meet at the ribs!!!